R-TYPE

UPRIGHT

NO: RTP-UP-US

(Nintendo[®])

OPERATION MANUAL

R-TYPE™ TM AND © 1987 Irem Corporation Licensed exclusively to Nintendo of America Inc.

©1987 Nintendo of America Inc.

TABLE OF CONTENTS

1.	Location Setup 1
	A. Game Installation
II.	Adjustments 4
	A. Adjustments of Video Monitor
III.	Maintenance and Repair 6
	A. Fuse Replacements 6 B. Cleaning 6 C. Operation Panel 6 1. Operation Panel Removal 6 2. Micro-Switch Replacement 6 3. Lubrication of 8 way Controller 7 D. Front Screen and Video Monitor Removal 8-9 E. Game P.C. Board Removal 10
IV.	Radio Frequency Interference
V.	Wiring Diagram 11-12
VI.	F.C.C. Schematics
VII.	R•Type P.C. Board Schematics(insert)
/III.	Power Supply Schematics14
IX.	Monitor Schematics (insert)
X.	Parts Lists
	A. Body Parts15-18B. Control Panel Assembly19-20C. Wiring Harnesses21D. R●Type P.C. Board Assembly22-25E. Power Supply26
XI.	Diagnostic Test

WARNING

Check before plugging the game in.

I. LOCATION SETUP

R•Type – Upright is shipped ready for operation. Please check the following to insure proper operation.

- (1) Check the exterior of the game for shipping damage, dents, chips, or broken parts.
- (2) Remove the screws on the rear door panel.
- (3) Unlock and open the rear door panel, as well as the service door, and inspect the interior of the game as follows:
 - a) Check that all the plug-in connectors are firmly connected.
 - b) Check all main subassemblies (monitor, power supply, control panel, etc.) to ensure they are securely mounted.

A. Game installation

(1) Requirements

Amperage: 1.2 AMPS

Temperature: 0 to 38 degrees Celsius (32 to 100 degrees Fahrenheit)

Humidity: Not over 95% relative

Space required: 323/8 × 233/4

Height: 683/8

B. Voltage selection

Before plugging in your game, make sure the terminal block of the power transformer is correct for your location's line voltage. See figure 1.

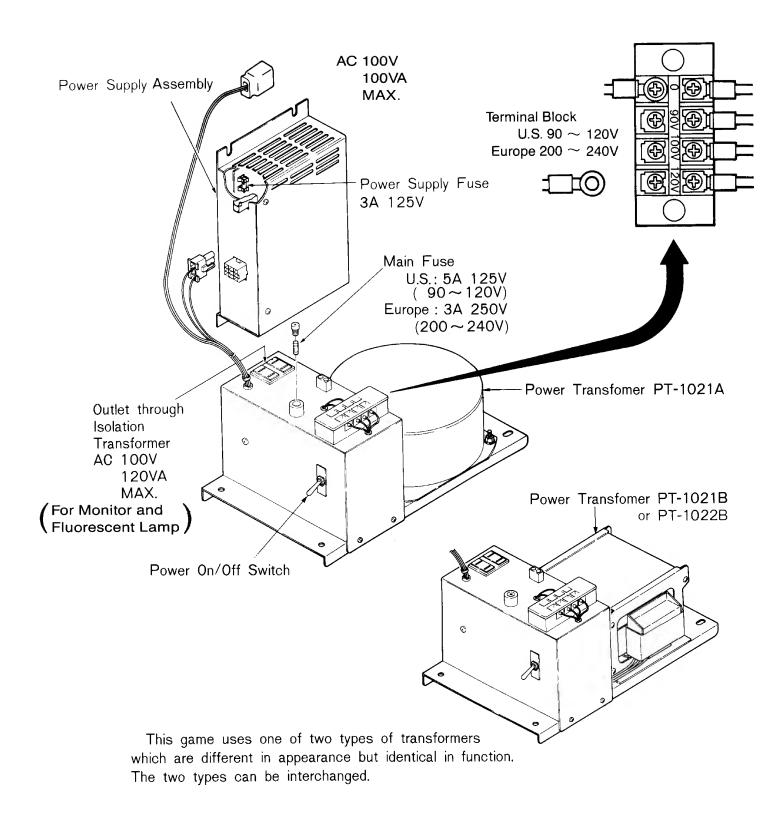


Fig. 1 Power Supply Assembly, Power Transformer and Voltage Selection

C. Power on/off switch

A power on/off switch is located in the rear of the game at the bottom left of the cabinet.

WARNING -

Please be sure you use a grounded outlet for this game. Failure to do so may result in destruction of electronic components.

D. Grounding of Game (Use only if 3 wire outlet is unavailable.) See Fig. 2

- (1) A grounding wire should be connected to a grounding bar or a metal pipe which is firmly inserted into the ground.
- (2) Do not connect the grounding to a water pipe, because polyvinyl-chloride pipes are sometimes used in water lines, and the electronic continuity to the ground may be interrupted.
- (3) Absolutely do not connect the grounding wire to a gas pipe, as this can be extremely dangerous.

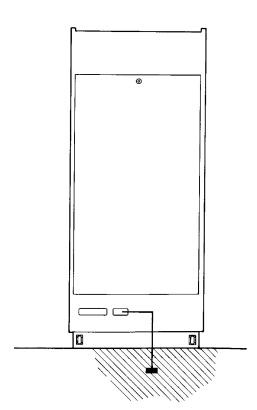


Fig. 2


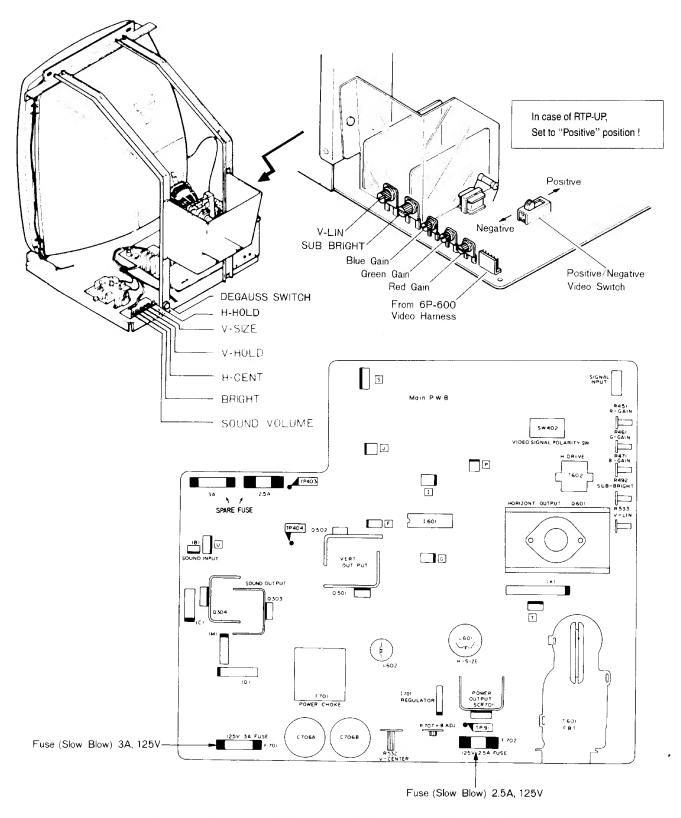


Fig. 6 Video Monitor : [Y51 Type] XM-2001N

-WARNING -

Do not touch the inside of the Video Monitor. It contains many parts supplied with high voltage.

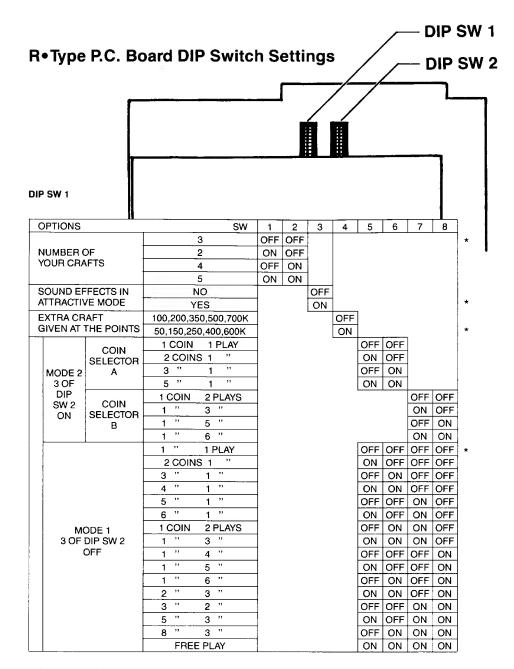

N.B. 1) Select Coin Mode 1 in case a single coin or two selectors for coins of the same value are used.

DIP SW 2

OPTIONS	SW	1	2	3	4	5	6	7	8	
FLIP PICTURE	NO	OFF								*
FLIP PICTORE	YES	ON								1
CABINET TYPE	TABLE		OFF							1
CADINETTIFE	UPRIGHT		ON							*
COIN MODE	MODE 1			OFF						*
COIN MODE	MODE 2			ON						1
DIFFICULTY	NORMAL			i i	OFF					1
DIFFICULIT	DIFFICULT				ON					*
CONTINUITY	YES					OFF				*
CONTINUITY	NO					ON				1
FREEZE PICTURE	NO						OFF			*
FREEZE FICTORE	YES						ON			1
NO DEATH MODE	NO							OFF		*
NO DEATH MODE	YES							ON		1
DIAGNOSTIC TEST	NO								OFF	*
DIAGNOSTIC TEST	YES								ON]

N.B. In the freeze picture mode, press 2P-start button to freeze and 1P-start button to restart the game.

²⁾ Select Coin mode 2 in case 2 coin selectors of different values are used.

^{*}RECOMMEND SETTINGS

III. MAINTENANCE AND REPAIR

A. Fuse Replacements

This game contains 4 fuses. Replace fuses only with the same type as listed below.

Specification of Fuses

(1) Main Fuse	U.S. : 5A 12 5V (90∼120V Europe : 3A 250V (200∼240V	•
(2) Power Suppl	y Fuse 3A 125V MIDGET	
(3) Video Monito	or Fuse 2.5 A 125V MIDGET 3A 125V MIDGET	

B. Cleaning

The exterior of the game, all metal parts and all glass parts can be cleaned with a nonabrasive cleanser.

C. Operation Panel

(1) Operation Panel Removal

Before repairing or replacing any switches or 8 way Controllers on the Operation Panel, unplug the game. Open the Service Door, and reach through the opening, and unlock the Clamps, located at each end on the underside of the Operation Panel.

(2) Micro-switch Replacement

Whenever you replace any micro-switch on the Operation Panel, a switch gap adjustment is needed as shown in Fig. 4. This adjustment is not necessary for the player option buttons.

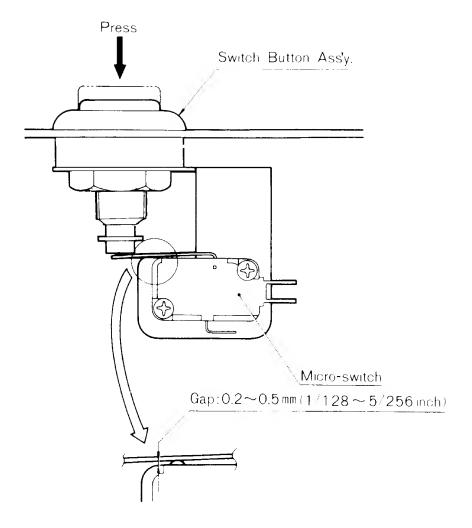


Fig. 4 Switch gap adjustment

(3) Lubrication for 8 way Controller

To maintain the 8 way Controller in good condition, lubricate the ball socket and 8 way Guide Plate approx. every 3 months. See Fig. 5.


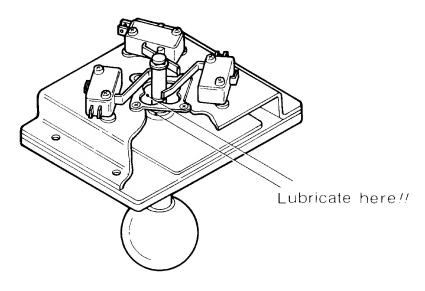


Fig. 5 Lubrication points

D. Front Screen and Video Monitor Removal

(1) Front Screen Removal

To remove the Front Screen, first remove the Control Panel by reaching through the Service Door and releasing the Control Panel Clasps. Pull the bottom of the Front Screen toward you allowing it to drop into the slots. Then pull out toward center of game. See Fig. 6

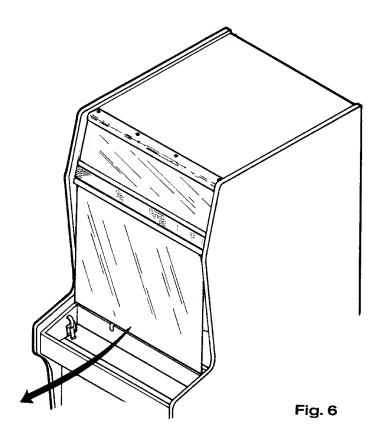

(2) Video Monitor Removal

If you need to remove the Video Monitor, follow the instructions listed below. But the following procedure should only be performed by an experienced service technician.

- WARNING -

It is recommended the game be left unplugged for at least one hour before removing the Video Monitor. This will probably discharge the CRT, but extreme caution is still necessary.

- (a) Make sure game is unplugged.
- (b) Remove back door and unplug all the harnesses and cables from the Video Monitor.
- (c) Standing at the front opening of the game, remove the four mounting machine screws and flat washers. See Fig. 7.
- (d) Carefully lift the Video Monitor and pull out toward you.

- WARNING -

Use extreme caution and do not touch electrical parts of the yoke area with your hands or with any metal object in your hands.


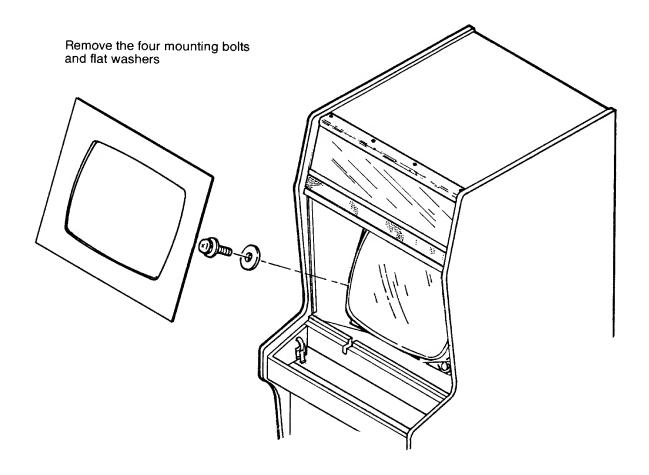


Fig. 7

E. Game PCB Removal

- (1) Make sure the game is unplugged!!
- (2) Open the rear door panel.
- (3) Remove the 36 pin and 44 pin edge connectors from the right side of the FCC-PCBs on the shield cover.
- (4) Pull out the 6 fasteners located on the perimeter of the shield cover. See Fig. 8
- (5) Remove the 56 pin FCC short harnesses from the game P.C. board.
- (6) Remove the game PCB from the shield cage by carefully sliding it straight out of the wooden PCB guides.

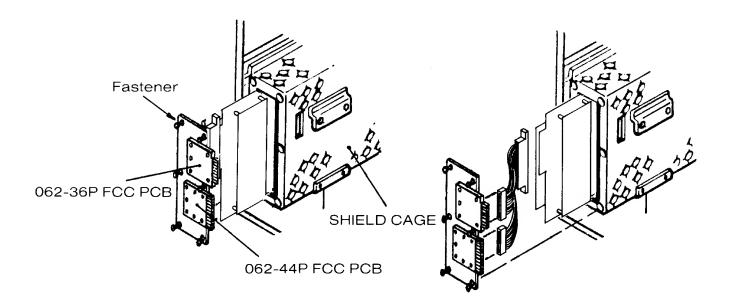


WARNING


A reversed connector will damage your PCB! If the connectors don't slip on easily, don't force them!


IV. RADIO FREQUENCY INTERFERENCE


In order to protect against the RFI radiated from this equipment, please comply with the following.


- (A) Do not use non-Nintendo parts!
- (B) Do not modify your game circuitry!
- (C) Do not modify the wiring harness and connections!
- (D) Connect this game only to a grounded 3-wire outlet.
- (E) After servicing the Game PCB, shut the Shield Cover completely with the Fasteners. See Fig. 8.

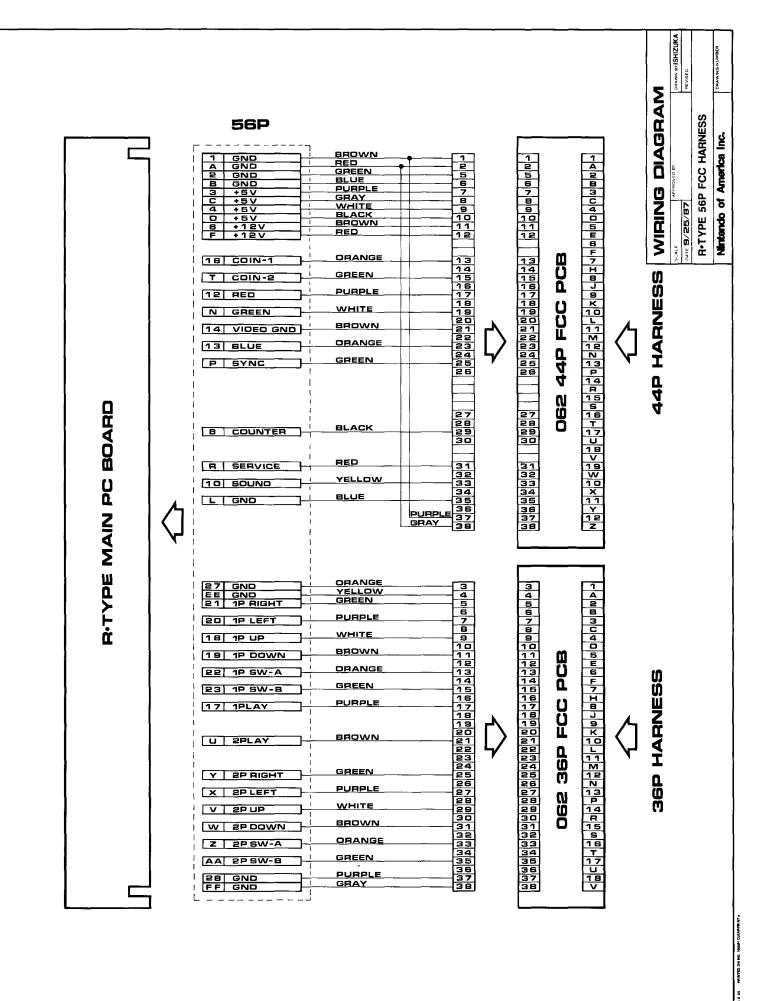

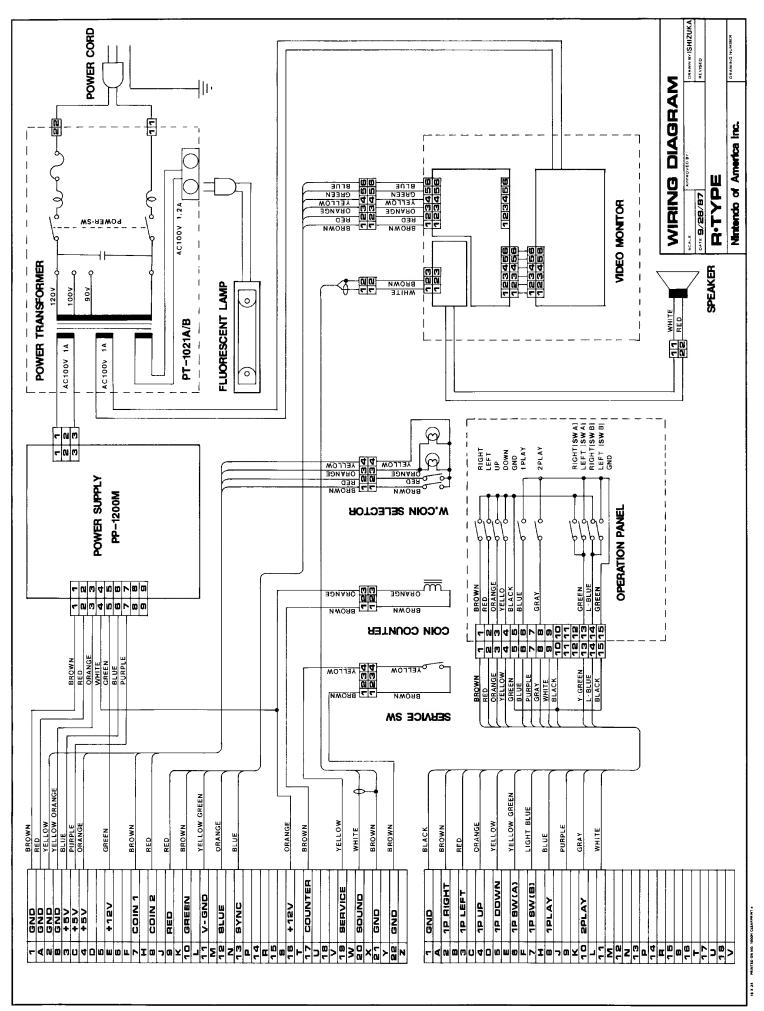

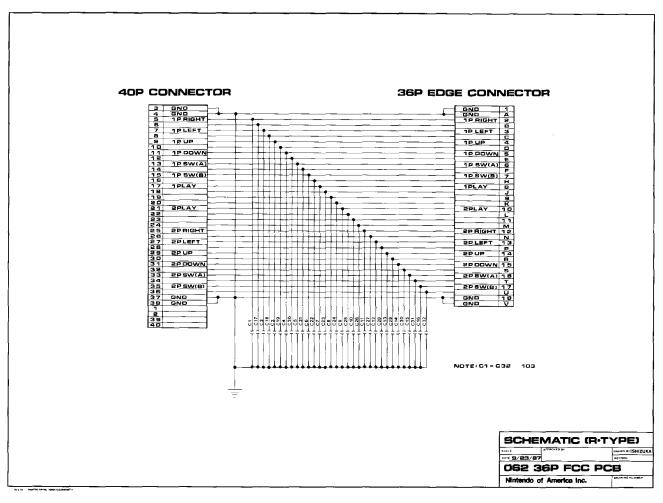

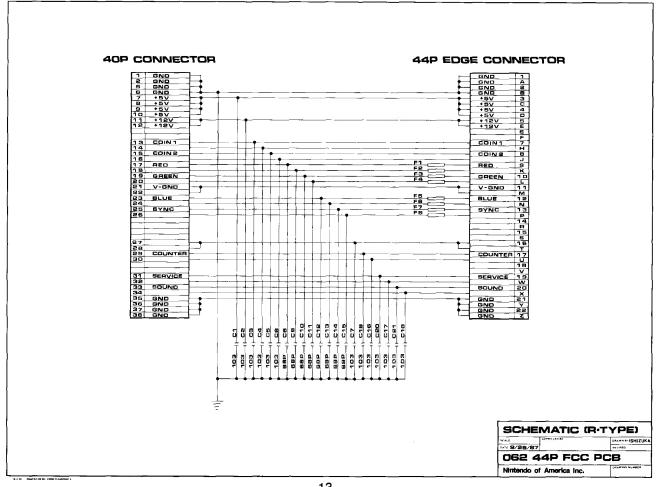


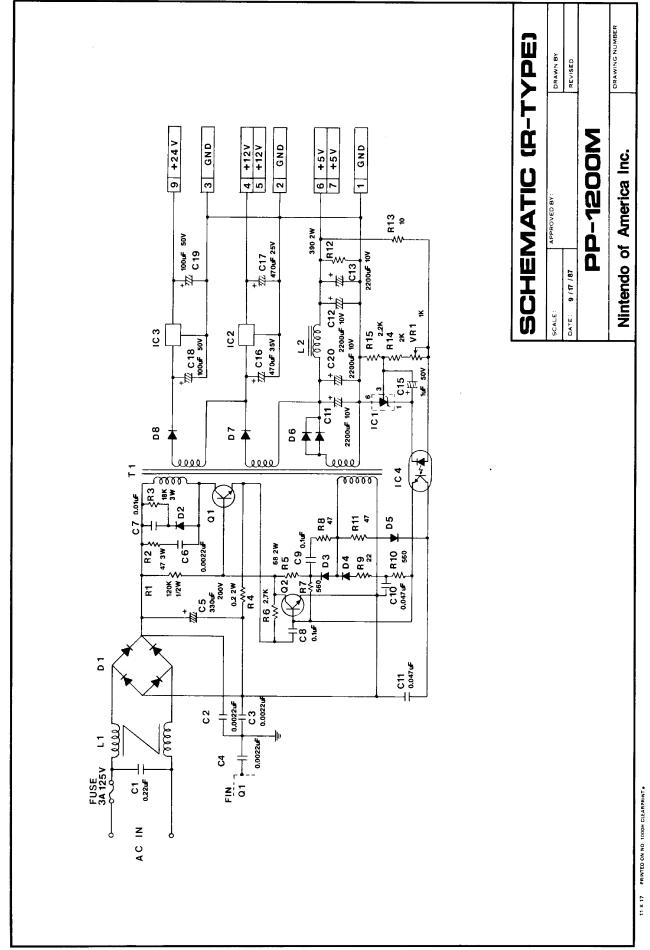

IX. Reorder Parts List

Body Parts — Front View (Fig. 9)

PART NO.	DESCRIPTION	
RTPU-01-01	Body (Black)	
MGSU-01-49	Speaker Grill	
MGSU-01-56	Top Trim	
TKGU-01-29	Fluorescent Lamp Ass'y	
TKGU-01-29-01	Fluorescent Lamp	
TKGU-01-29-02	Lamp Starter (Glow Lamp)	
RTPU-01-24	Name Plate Plexi with Overlay	
TKGU-01-48	Control Panel Retainer	
TPPU-01-52	Monitor Support Bar	
TPPU-01-50	Monitor Mounting Brkt Left	
TPPU-01-51	Monitor Mounting Brkt Right	
TKGU-20-00	Video Monitor (20-5F) (Standard Scan)	
TKGU-20-01	Video Picture Tube	
TPPU-01-68	Blind Cardboard (Small)	
MGSU-01-67	Blind Cardboard (Large)	
MGSA-01-23	Front Screen (Glass)	
RTPU-23-60	Operation Panel Ass'y	
TKGU-01-31	Draw Latch	
TMAU-14-17	Service Door ADD-S2	
TMAU-14-18	Coin Selector	
TMAU-34-19	Coin Switch	
TMAU-14-12	Front Door Lock	
TMAU-11-27	Cash Box	
RTPU-01-32	CS Frame 120 W Ass'y 12V	
RTPU-01-11	Game Counter	
TKGU-01-33	Service Switch	
TMAU-11-20	CS Plate 120W (Only)	
MDSA-01-71	T Molding (Black)	
TMAU-14-11	Cash Door	
RTPU-11-23	Side Decal (R-Type)	
	RTPU-01-01 MGSU-01-49 MGSU-01-56 TKGU-01-29 TKGU-01-29-01 TKGU-01-29-02 RTPU-01-24 TKGU-01-48 TPPU-01-52 TPPU-01-50 TPPU-01-51 TKGU-20-00 TKGU-20-01 TPPU-01-68 MGSU-01-67 MGSA-01-23 RTPU-23-60 TKGU-01-31 TMAU-14-17 TMAU-14-18 TMAU-14-19 TMAU-14-12 TMAU-14-12 TMAU-11-27 RTPU-01-32 RTPU-01-33 TMAU-11-20 MDSA-01-71 TMAU-14-11	

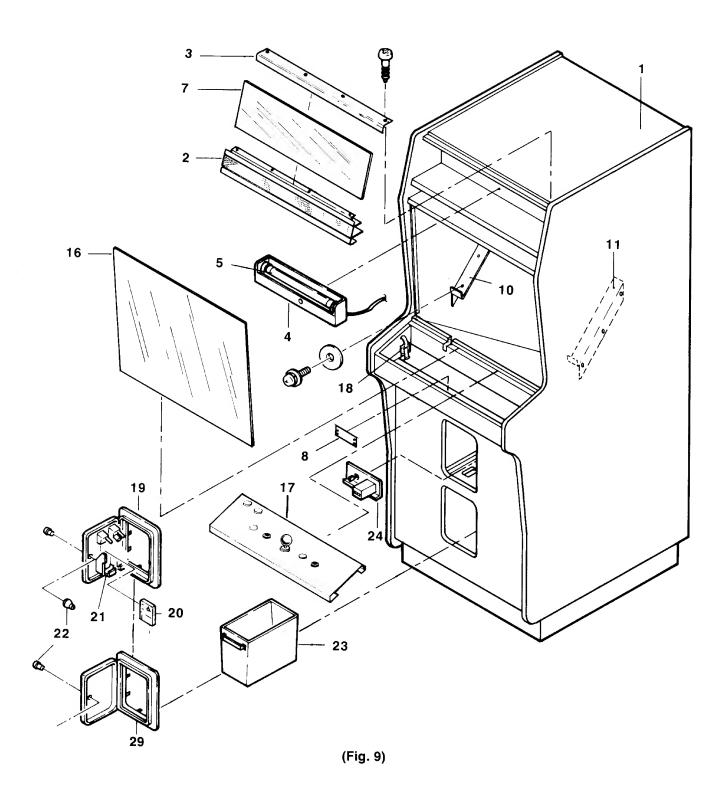

IX. Reorder Parts List, Continued

Body Parts — Rear View (Fig. 10)

ITEM	PART NO.	DESCRIPTION
1	MGSA-01-01-05	Back Door
2	TKGU-01-03	Back Door Lock (Key #6510)
3	TKGU-01-03-01	Back Door Key Only (Key #6510)
4	TKGU-01-05	Cam A-Type (Back Door Lock)
5	RTPU-21-00	P.C. Board Ass'y
6	RTPU-01-01-11	FCC Shield Cover
7	MDSU-01-01-12	062 44P FCC P.C.B. Ass'y
8	MDSU-01-01-13	062 36P FCC P.C.B. Ass'y
9	MDSU-23-35	Snap In Fastener
10	TPPU-01-01-14	FCC Sponge (Black)
11	CHPU-01-01-15	Shield Cover Label
12	TKGU-01-08	Power Cord 5M
13	TKGU-01-10	Strain Relief Bushing
14	TKGU-01-65	Strain Relief Bushing Plate
15	TKGU-11-08	Fuse 5A 125V
16	TKGU-01-30	Caster
17	RTPU-01-01-10	Shield Cage
18	MDSU-08-00	Power Supply PP-1200 M
19	CHPU-08-01	Power Transformer PT1021A or B
20	TKGU-01-07	Back Door Lock Stopper Plate
21	RTPU-11-05	Back Door Label
22	TPPU-11-25	FCC Label
23	TKGU-11-17	Monitor Adjustment Label
24	RTPU-23-61	Operation Manual (R-Type)
25	MGSA-01-67	Blind Cardboard (Large)
26	TPPU-01-68	Blind Cardboard (Small)
27	TKGU-20-00	Video Monitor (20-EZV) (Standard Scan)
28	TKGU-20-01	Video Picture Tube
29	TKGU-10-43	Speaker 16 CM 8 OHM


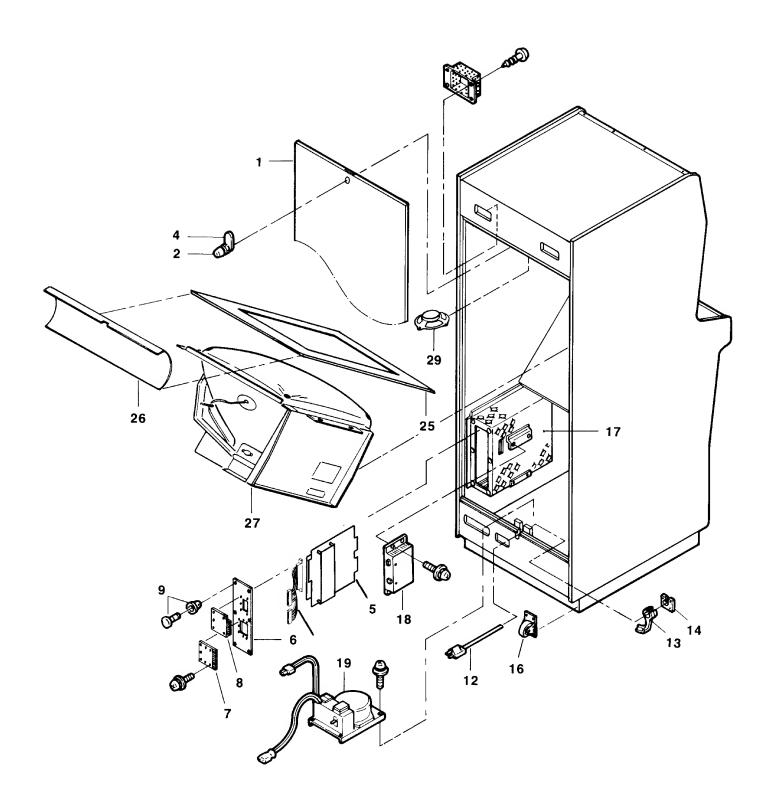


Fig. 10

Operation Panel Assembly (Fig. 11)

ITEM	PART NO.	DESCRIPTION
1	MDST-14-12	8 Way Control Lever Assembly
2	TKGU-23-21	Switch Collar
3	TNX-23-18	8 Way Guide Plate
4	TKGU-23-17	Switch Spacer
5	TKGU-23-16	Bearing Brkt
6	TKGU-23-20	Spring Stopper
7	TKGU-23-22	Lever Spring
8	TKGU-23-23	E-Ring
9	TKGU-23-13	Micro Switch
10	TMAU-12-15	Lever Plate
11	TMAU-12-14	Control Knob Plate
12	TMAU-12-16	Control Knob Collar 8L
13	TMAU-11-18	Knob with Shaft 80.5L
14	RTPU-01-22	Operation Panel Base
15	TKGU-23-12	Switch Button Bracket
16	TMAU-34-18	Micro Switch VL 12L (Straight)
17	MDSU-12-17	Black Sponge, 2 x 10 x 580L
18	TKGU-23-26	Nut Plate
19	TKGU-23-34	Pal Nut M16
20	MDST-12-21	Button Assembly (Black)
21	MDST-12-17	Button Assembly (Crimson)
22	TMAK-11-19	Operation Panel Fastener
23	TMAU-12-18	Collar — 34 x 28 x 7H
24	MDST-12-24	Button Assembly (Light Blue)
25	MDST-12-27	Button Assembly (Green)

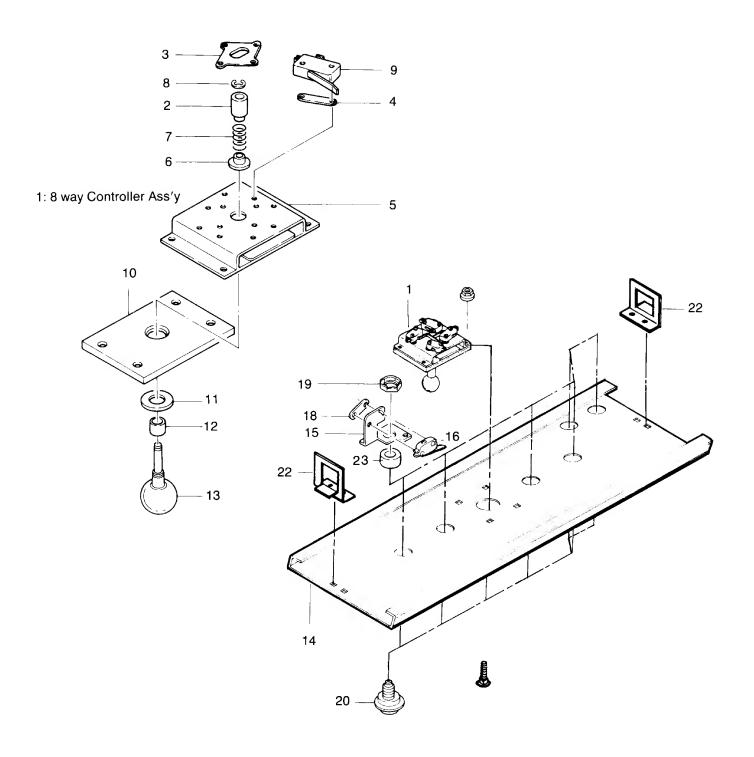

(Fig. 11)
Operation Panel Assembly

Wiring Harnesses

PA	RT NO.	DESCRIPTION
RTP	U-41-11	56P FCC Harness
RTP	U-41-13	UP-072R-44P Edge Harness
MGS	SU-41-14	UP-072-36P Edge Harness
RTP	U-42-11	15P Switch Harness
TPP	U - 93-07	6P-600 Video Harness
TPP	U-93-02	2P-400 Audio Harness
TMA	.U-41-13	48-800 Service Switch Harness
TMA	U-41-14	4P-600 Coin Sw.Harness
TMA	.U-41-12	3P-500 Counter Harness
TKG	U-13-17	2P-860 Speaker Harness

M72 A-C PC Board

ITEM	PART NO.	DESCRIPTION
CHPU-22-42	74LS174, IC1	TTL
CHPU-22-44	74LS244, IC4-8, IC16-17, IC31, IC42, IC72	TTL
MDST-21-28	74LS373, IC13, IC33, IC44	TTL
MDST-21-27	74LS245, IC14-15, IC18, IC34, IC41, IC46	TTL
RTPU-22-01	74ALS374, IC25-28	TTL
RTPU-22-02	74ALS08, IC29, IC40	TTL
CHPU-21-43	74LS374, IC30	TTL
CHPU-21-29	74LS08, IC47	TTL
MDST-21-23	74LS138, IC51	TTL
CHPU-21-27	74L02, IC52	TTL
CHPU-22-08	74LS86, IC57	TTL
MDST-21-18	74S04, IC58	TTL
RTPU-22-03	74ALS00, IC59	TTL
RTPU-22-04	74ALS74, IC60	TTL
MDST-21-21	74LS74, IC61, IC69	TTL
MDST-21-20	74LS32, IC63	TTL
CHPU-21-42	74LS367, IC64	TTL
RTPU-22-05	74LS38, IC67	TTL
CHPU-21-35	74LS139. IC68	TTL
RTPU-22-06	74S158, IC77	TTL
RTPU-22-07	TMM2016BP-10, IC21-22	RAM
RTPU-22-00	TMM2018D-55, IC23-24	RAM
RTPU-22-09	TMM2018D-35, IC36-39	RAM
RTPU-22-10	uPD43256C-10L, IC70-71	RAM
CHPU-21-11	D780C-1/Z80A, IC53	
RTPU-22-11	M51202TL, IC55	Comparator
RTPU-22-12	uPD70116C-8, IC56	
RTPU-22-13	uPD71011C, IC65	
RTPU-22-14	uPD71088C, IC73	
RTPU-22-15	uPD71059C, IC74	
RTPU-22-16	NJM 064D, IC102	
RTPU-22-17	YM-3014, IC103	
RTPU-22-18	YM-2151, IC104	
RTPU-22-19	PAL16L8ACN/TIB PAL 16L8-25CN, IC11	PAL
RTPU-22-20	PAL16L8ACN/TIB PAL 16L8-25CN, IC19	PAL
RTPU-22-21	TBP24S10, IC66	PROM
RTPU-22-22	TBP24S10, IC75	PROM
RTPU-22-23	KNA71H010 (No. 15), IC2	Custom
RTPU-22-24	KNA72H010 (No. 14), IC9	Custom
RTPU-22-25	KNA72H009 (No. 13), IC10	Custom
RTPU-22-26	KNA70H016 (No. 12), IC35	Custom
RTPU-22-27	KNA65005-17, IC62	Custom
RTPU-22-28	KNA70H015 (No. 11), IC76	
RTPU-22-29	KNA91H014, IC79	Custom
CHPU-24-27	470 ohm 1/4w. R1-4, R9-10, R20	Carbon
MDST-32-61	220 ohm 1/4w. R5	Carbon

ITEM	PART NO.	DESCRIPTION
MDST-21-48	4.7k ohm 1/4w, R6-7, R19, R102-194	Carbon
MDST-21-44	1k ohm 1/4w R8, R13-14, R101	Carbon
TKG-56-46	22k ohm 1/4w, R11	Carbon
MDST-21-49	10k ohm 1/4w, R12, R15	
MGSP-08-16	18k 1/4w, R20-22	D.N. et al.
RTPU-22-30	1HR-8-472JA, RA1-2, RA12	R-Network
RTPU-22-31	RGLD8M472J221J, RA3-8	R-Network
RTPU-22-32	1HR-8-103JA, RA9	R-Network
RTPU-22-33	1HR-8-102JA, RA10-11	R-Network
RTPU-22-34	RGSD10L471G, RA13-15	R-Network
RTPU-22-35	VZ103KSL2-50k ohm, VR1	Variable Resistor
MDST-21-67	0.1 mfd 12v, C1-22, C25, C27, C31-96, C114, C116	Ceramic
MDST-21-72	47 mfd 16v, C23, C26, C105	Electrolytic
MDST-21-71	10 mfd 16v, C24	Electrolytic
RTPU-22-36	390 pfd 50v, C28, C97	Ceramic
TUB-08-21	2200 mfd 16v, C101-102	Electrolytic
RTPU-22-37	.15 mfd 50v, C103	Polyester
TKG-08-27	470 mfd 25v, C104	Electrolytic
RTPU-22-38	.01 mfd 50v, C106	Polyester
RTPU-22-39	.001 mfd 50v, C107	Polyester
TMAU-21-90	1 mfd 25v, C108	Electrolytic
MDST-21-46	2.2k ohm 1/4w, C109	Carbon Resistor
RTPU-22-40	6800 pfd 50v, C110	Polyester
RTPU-22-41	1200 ofd 50v, C111	Polyester
RTPU-22-42	3300 pfd 50v, C112	Polyester
MON-09-55	100 mfd 25v, C113	Electrolytic
TMAU-21-98	10 mfd 25v, C115	Tantalum
MDST-21-65	220 pfd 50v, IC47 Pins 7-8	Ceramic
RTPU-22-43	DSS310-55B-101M, LC1-4	EMI Filter
RTPU-22-24	1S5277B, D1-2	Diode
TPP-08-11	1S1588, D3-4	Diode
RTPU-22-45	2SC2120, TR1-2	Transistor
CHPU-21-50	2SC1815, TR3	Transistor
RTPU-22-46	KSD-08, SW1-2	Dip Switch
RTPU-22-47	3.58 mhz, X1	Xtal
RTPU-22-48	32 mhz, X2	Xtal
TMAU-21-104	20-Pin Socket, IC11, IC19	Socket
MDST-21-82	40-Pin Socket, IC53, IC56	Socket
CHPU-21-58	16-Pin Socket, IC66, IC75	Socket
RTPU-22-49	XG3A-6014, CN1-2	Connector
RTPU-22-50	XC5E-5021, CN3	Connector
RTPU-22-51	XC5E-6421/XC2E-6411, CN4	Connector
RTOU-22-52	B3PS-VH, CN5	Base Post
	20. 0 111, 0110	Dage Fogt

M72 B-D PC Board

ITEM	PART NO.	DESCRIPTION
CHPU-21-27	74LS02, IC1	TTL
CHPU-22-08	74LS86, IC2, IC50, IC57, IC80-81, IC84-85	TTL
CHPU-22-43	74LS1875, IC4, IC7, IC60, IC65	TTL
RTPU-23-01	74LS166, IC5-6, IC13-14	TTL
MDST-21-21	74LS74, IC10-11, IC41, IC48, IC83	TTL
MDST-21-24	74LS157, IC12, IC15, IC61-64, IC71-74	TTL
CHPU-22-34	74LS20, IC16-17	TTL
MDST-21-27	74LS00, IC18, IC28	TTL
CHPU-22-42	74LS174, IC19, IC29, IC31, IC38, IC70, IC75	TTL
CHPU-22-45	74LS273, IC30, IC32, IC37, IC39, IC42, IC47, IC58-59, IC66-67	TTL
MDST-21-23	74LS138, IC40, IC49	TTL
CHPU-21-43	74LS374, IC43, IC46, IC53-54	TTL
CHPU-22-44	74LS244, IC44-45, IC53, IC55	TTL
MDST-21-20	74LS32, IC51, IC56	TTL
CHPU-22-46	74LS283, IC68-69, IC76-79, IC86-87	TTL
MDST-21-19	74LS10, IC82	TTL
CHPU-21-42	74LS367, IC88	TTL
RTPU-23-02	uPD4364CX-10L, IC33-36	RAM
RTPU-23-03	KNA604201 (No. 6), IC3, IC8	Custom
RTPU-23-19	KNA91H014	Custom
RTPU-23-04	27256, IC20	EPROM
RPU-23-05	27256, IC21	EPROM
RTPU-23-06	27256. IC22	EPROM
RTPU-23-07	27256, IC23	EPROM
RTPU-23-08	27256, IC24	EPROM
RTPU-23-09	27256, IC25	EPROM
RTPU-23-10	27256, IC26	EPROM
RTPU-23-11	27256, IC27	EPROM
MGSP-08-16	18k ohm 1/4w, R1-4	Resistor
RTPU-23-12	RGSD10L471G, RA1-3	R-Network
RTPU-23-13	390 pfd 50v, C1-2	Ceramic
MDST-21-67	0.1 mfd 12v, C3-81	Ceramic
RTPU-23-14	100 pfd 50v, C93	Ceramic
RTPU-23-15	32-Pin Socket, IC20-27	Socket
RTPU-23-16	XG3A-6014, CN1-2	Connector
RTPU-23-17	IMSA-9202-H, J2-5	Short Pin
RTPU-23-18	IMSA-9202B-1.3, J2-5	Short Base

M72 ROM-C PC Board

ITEM	PART NO.	DESCRIPTION
MDST-21-27	74LS245, 1A, 2A	TTL
RTPU-21-01	uPD 4364CX-10L, 1F, 3F	RAM
RTPU-21-02	27512, 1B	EPROM
RTPU-21-03	27512, 1C	EPROM
RTPU-21-04	27512, 1H	EPROM
RTPU-21-05	27512, 1K	EPROM
RTPU-21-06	27512, 3B	EPROM
RTPU-21-07	27512, 3C	EPROM
RTPU-21-08	27512, 3H	EPROM
RTPU-21-09	27512, 3K	EPROM
RTPU-21-10	27256, 1J	EPROM
RTPU-21-11	27256, 1L	EPROM
RTPU-21-12	27256, 3J	EPROM
RTPU-21-13	27256, 3L	EPROM
RTPU-21-14	PAL 16L8ACN, 7N	PAL
RTPU-21-15	1HR-8-103JA	R-Network
MDST-21-67	0.1 mfd 12v, C1-21	Ceramic
RTPU-21-16	32 Pin Socket, 1B-L, 3B-L	Socket
RTPU-21-17	20 Pin Socket, 3A	Socket
RTPU-21-18	XC5B-5021, CN3	Connector
RTPU-21-19	XC5B-6421/XC2B-6411, CN4	Connector
RTPU-21-20	IMSA-9202H, J1-2	Short Pin
RTPU-21-21	IMSA-9202B-1.3, J1-2	Short Base

PP-1200M Power Supply

ITEM	PART NO.	DESCRIPTION
RTPU-08-01	2SC3317, Q1	Transistor
RTPU-08-02	2SC2235, Q2	Transistor
RTPU-08-03	KBL-02, D1	Diode Bridge
MDST-32-17	ERB 44-04, D2	Fast Recovery Diode
MDST-32-16	ERB 44-02, D8	Fast Recovery Diode
RTPU-08-04	1S592, D3	Diode
TKG-08-15	1S1588, D4-5	Diode
MDST-32-18	ESAC82-004, D6	Schottky Diode
RTPU-08-05	ERB81-004, D7	Schottky Diode
RTPU-08-06	IR9431, IC1	Shunt Regulator
RTPU-08-07	TA78012AP, IC2	Regulator
RTPU-08-08	TA78024AP, IC3	Regulator
RTPU-08-09	PC817, IC4	Photo Coupler
RTPU-08-10	PLA1021A, L1	Coil
RTPU-08-11	Coil, L2	Coil
RTPU-08-12	2200 pfd 125v, C2-4	Ceramic
MDST-32-37	2200 pfd 400v, C6	Polyester
MDST-32-35	.01 mfd 400v, C7	Polyester
MDST-32-31	.1 mfd 50v, C8-9	Polyester
RTPU-08-13	.047 mfd 50v, C10-11	Polyester
MDST-32-36	.22 mfd 125v, C1	Metallized Polyester
RTPU-08-14	330 mfd 200v, C5	Electrolytic
RTPU-08-15	2200 mfd 10v, C12, C20	Electrolytic
RTPU-08-16	2200 mfd 10v, C13, C14	Electrolytic
RTPU-08-17	1 mfd 50v, C15	Electrolytic
RTPU-08-18	470 mfd 35v, C16	Electrolytic
RTPU-08-19	470 mfd 25v, C17	Electrolytic
RTPU-08-20	100 mfd 50v, C18-19	Electrolytic
RTPU-08-21	18k ohm 3w, R3	Metal Film
RTPU-08-21	68 ohm 2w, R5	Metal Film
RTPU-08-23	390 ohm 2w, R12	Metal Film
RTPU-08-24	47 ohm 3w, R2	Metal Film
MDST-32-43	.2 ohm 2w, R4	Cement
RTPU-08-25	120k ohm 1/2w, R1	Carbon
PCHU-21-98	2.2k ohm 1/4w, R15	Carbon
MDST-32-59	560 ohm 1/4w, R7, R10	Carbon
RTPU-08-26	47 ohm 1/4w, R8, R11	Carbon
CHPU-21-70	10 ohm 1/4w, R13	Carbon
TPP-08-23	22 ohm 1/4w, R9	Carbon
CHPU-24-28	2K ohm 1/4w, R14	Carbon
MDSU-08-28	2.7k ohm 1/4w, R14 2.7k ohm 1/4w, R6	Carbon
RTPU-08-26	·	Carbon
	1k ohm Variable Resistor, VR1	
RTPU-08-27	Transformer 68-0435, T	
RTPU-08-28	Fuse, 3 amp, F1	
RTPU-08-29	3-Pin Power Harness (in)	
RTPU-08-30	9-Pin Power Harness (out)	

XI. Diagnostic Test

To start a diagnostic test, turn the game off and set Dip Switch Number 2, position 8, to ON, then turn the game back on.

The RAM and ROM will automatically be tested upon Power Up. The screen should show "RAM OK" and "ROM OK". If the RAMs are faulty, "RAM NG" and a number (1-6) will be shown. The number will correspond to one of the following:

- 1. Work RAM (byte check)
- 2. Work RAM (word check)
- 3. V-RAM A (word check)
- 4. V-RAM B (word check)
- 5. Sound L (byte check) 0000H to 7FFFH
- 6. Sound H (byte check) 8000H to FFFFH

If the ROMs are defective, "ROM NG" will be shown.

To bring up test menu, press the 1-Player and 2-Player buttons simultaneously. The following test menu will be shown:

I/O Sound Character Color Cross Hatch

Move the Joystick up or down to select test. Press the Fire button to start each test, and press the 1-Player and 2-Player buttons simultaneously to terminate the test and return to the test menu. The five tests are as follows:

1) I/O Port Test

Tests Joystick, buttons, coin acceptors and displays dip switch settings. Shown on the screen as follows:


	8	7	6	5	4	3	2	1	8	7	6	5	4	3	2	1
In Port 1	Ο	0	0	0	0	0	0	0	0	0	0	0	0	0	0	О
In Port 2	0	О	0	О	О	О	О	О	0	О	0	О	0	О	0	0
Dip SW	-	_	O Off,	_	_	_	_	0	0	0	0	0	0	0	0	0

2) Sound Test

Screen will show number (1-65) and corresponding sound will be heard.

3) Character Test


Four ships will be displayed as shown below:

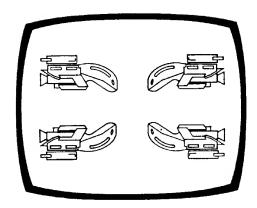

3) Color Test

Move the joystick down to advance the test. The following will be shown:

Entire screen will show blue, then red, magenta, green, cyanic, yellow, white and the following color pattern:

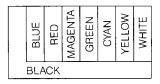


5) Cross Hatch Pattern

A 16-line cross hatch pattern will be shown with 2-dot wide white lines.

Adjustment of Video Monitor


Video Monitor: Type XM-2001N

CHASSIS LAYOUT

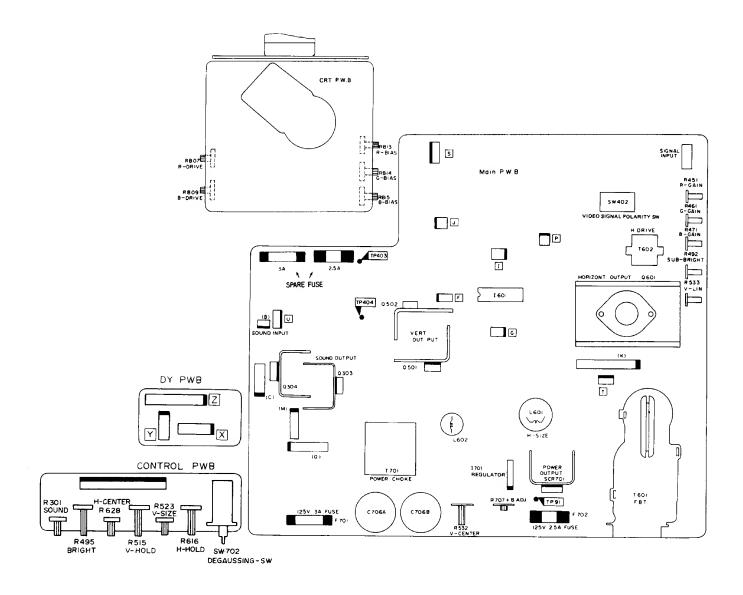

WARNING -

The Video Monitor contains HIGH VOLTAGE capable of delivering LETHAL quantities of energy. TO AVOID DANGER TO LIFE, don't attempt to service the chassis until all precautions necessary for working on HIGH VOLTAGE equipment have been observed.

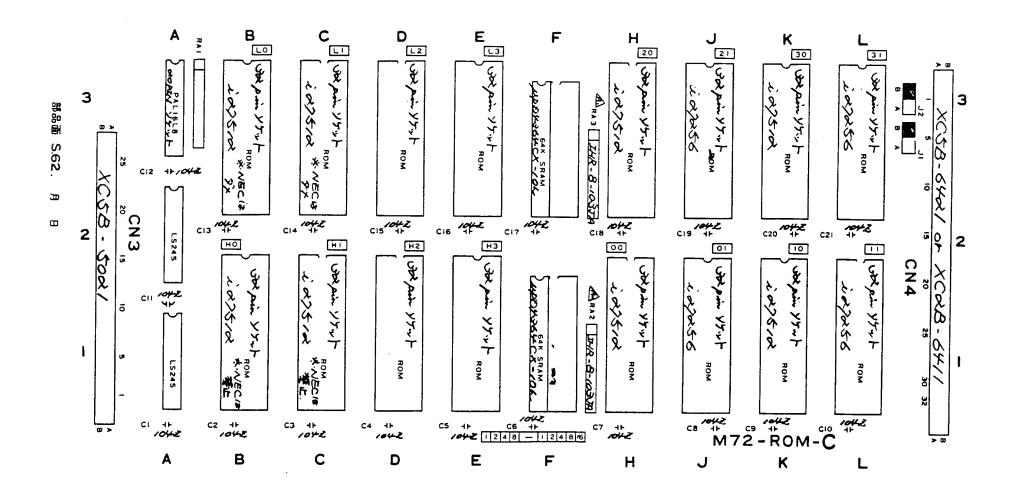

NAN	VAO C		RATION	TITLE	
DATE	DRAWN	CHECKED	DESIGNED APPROVED	MRZ-ROM-C POXT	
62.6.15 SPALE	模山	+ ")	62 6. 15	5 V 00780	\triangle

B 002 4 35.0.0

